



Olympus Tough TG-1 Battery Replacement

Switching out your useless or damaged battery for a new one.

Written By: Richard Yacobellis



Step 1 — Battery



- Locate compartment door on bottom of the camera.
- The battery compartment has two latches to prevent the cell from falling out. First, slide the latch labeled **LOCK**. Then, slide the bigger latch toward the symbol that resembles pacman.

Step 2



- Open compartment door. Remove battery.
- ⚠ Batteries contain highly acidic contents. If yours has leaked or ruptured while inside the compartment, there may be damage to the camera's circuitry. Clean out any residue using latex gloves and tissues.
- ⓘ For loose compartment doors, check the hinge or the locking pieces under the rubber pad (simply unscrew and remove the rubber and metal plate).

To reassemble your device, follow these instructions in reverse order.

